Last Review Date: 11/07/2016

DOCUMENT MANAGEMENT SYSTEM Page 1 of 2

Doc# UT05-07-SJP Title: PLATE WASHING Issue Dt: 04/09/2015 Revision Dt:04/14/2015

Revision Dt:04/14/2015 Review Interval:24
Cat: Safety Doc Type: SJP

Auth:

Desc: PLATE WASHING

Loc: Midwest - Plant Maintenance Service-Midwest - Plant Maintenance-Midwest-Gary Works

1.0 PURPOSE

PLATE WASHING

2.0 HAZARDS

SLIPPING HAZARD, WATER ON FLOOR.

THE OPERATOR SHOULD BE ALERT TO ANY DEPARTURE FROM NORMAL OPERATING CONDITIONS.

THE WEIGHT OF THE SPRAY BAR CREATES A SERIOUS HAZARD WHEN TENSION IS LOST ON ITS SUPPORT CABLES.

IF THE SPRAY BAR FALLS FREE OF CABLE TENSION, IT COULD STRIKE VARIOUS PARTS OF THE OPERATOR'S BODY THEREBY CAUSING INJURIES, SUCH AS CUTS AND BONE FRACTURES.

3.0 PERSONAL PROTECTIVE EQUIPMENT

HARD HAT SAFETY SHOES SAFETY GLASSES GLOVES LONG SLEEVE SHIRT

4.0 TOOLS AND EQUIPMENT

5.0 PRECAUTIONS AND LIMITATIONS

6.0 PRE-REQUISITE ACTIONS, PERMITS, OR FORMS

UncontPagelleofCopy Print Date: 7/25/2018 8:39:11 AM Uncontrol

Last Review Date: 11/07/2016

DOCUMENT MANAGEMENT SYSTEM Page 2 of 2

Doc# UT05-07-SJP Title: PLATE WASHING Issue Dt: 04/09/2015 Revision Dt:04/14/2015

Revision Dt:04/14/2015 Review Interval:24 Cat: Safety Doc Type: SJP

Auth:

Desc: PLATE WASHING

Loc: Midwest - Plant Maintenance Service-Midwest - Plant Maintenance-Midwest-Gary Works

7.0 WORK PROCEDURE

SET CONTROLS FOR	1.	IN ORDER FOR THE OPERATOR TO WASH THE CLOTH, THE OPERATOR SHOULD
ACCEPTED		PLACE THE PLATE WASHER, PLATE SHIFTER, PLATE WASHER CARRIDGE AND
OPERATING		PLATE WASHER SPRAY BAR SELECTOR SWITCHES IN THE "AUTO" POSITION. THIS
PROCEDURE		WILL ALLOW THE PRESS CONTROLS TO AUTOMATICALLY INDEX AND WASH EACH
		PLATE INDIVIDUALLY.
		SELECT NUMBER OF PASSES 1,2 OR 3 (NORMALLY 3).
REVIEW SEPARATE		
JBSA or Triton	2.	DURING A CLOTH WASH CYCLE THE OPERATOR SHOULD STAY IN AREA TO CHECK
CLOTH WASHING		OPERATION.
PUMP AND		
CHEMICAL FEED	3.	ALL EMERGENCY STOP BUTTONS MUST BE OUT FOR BOTH FILTER PRESSES IN
SYSTEM		ORDER TO OPERATE THE PLATE WASHING EQUIPMENT.
	4.	THE OPERATOR SHOULD BE ESPECIALLY ALERT TO THE PROPER FUNCTIONING OF
		THE SPRAY BAR. IF FOR ANY REASON THE SPRAY BAR SHOULD BECOME JAMMED
		OR WEDGED SO AS TO BE UNWORKABLE WHILE INDEXING A PLATE. THE OPERATOR
		SHOULD IMMEDIATELY HIT THE E-STOP BUTTON LOCATED ON THE SPRAY BAR. THE
		OPERATOR MAY NOT BE ABLE TO FREE THE SPRAY BAR WITHOUT ASSISTANCE.
	5.	THE SPRAY BAR IN CONJUNCTION WITH ITS ANCILLARY EQUIPMENT CAN DEVELOP
		1,250-PSI water pressure at 60 GPM. Therefore, operators should
		NEVER PLACE ANY PART OF THEIR PERSON INTO THE SPRAY STREAM.
	6.	SQUEEGEE WATER OFF FLOOR.

UncontPagel2of2opy Print Date: 7/25/2018 8:39:11 AM Uncontrol